


INSTRUCTIONS FOR INSTALLATION

BOBRICK 1002702 FLOOR ANCHOR PACKET


(Includes: 3 Hex Nuts, 3 Flat Washers, Wedge Anchor, Lock Washer, Flat Shoe Retainer)

Finished detail of Floor Anchor.

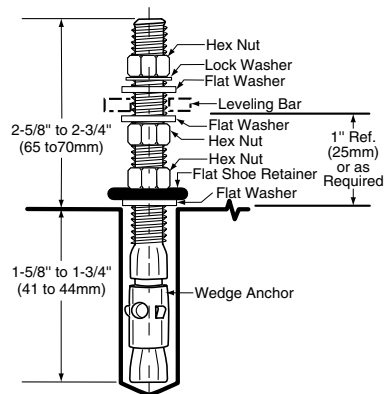

1002702
Floor Anchor Packet

Finished detail of Floor Anchor with Stile.

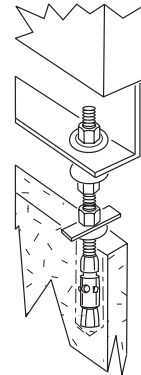


TOOLS NEEDED:

- Hammer
- Drill
- 3/8" (9.5mm) Concrete/Masonry Bit
- Crescent or Open Ended Wrench (with 9/16" open end)


HINTS/NOTES:

NOTE: Wood-floor anchors are available upon request.


- A. Drill a 3/8" (9.5mm) hole to 2" (50mm) minimum depth.

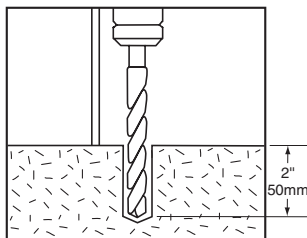


- B. Remove all loose material/debris from hole.

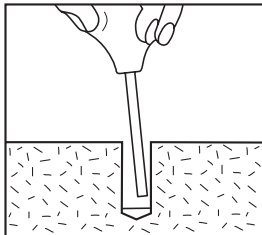


- C. Add Flat Washer, Flat Shoe Retainer, Hex Nut to Wedge Anchor so that Flat Washer is 1-7/8" (48mm) from the bottom of the anchor to insure proper installation depth. Thread 2nd Hex Nut loosely to top of Anchor to prevent stripping or damaging threads during installation.

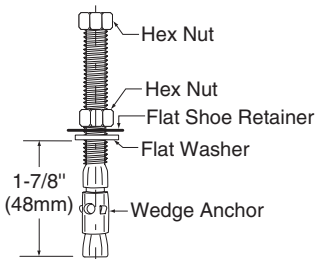


- D. Insert Anchor into hole with threaded side up. Use hammer to drive the Anchor into hole until Flat Washer (depth set in STEP 2C) is flush with concrete surface.

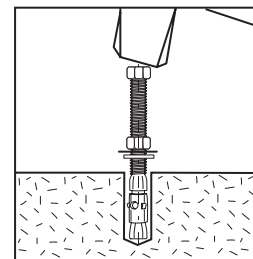

- E. Use Wrench to tighten Hex Nut until anchor is firmly set. 2-4 full turns past finger tight position. Anchor bolt will move approx. 1/16" (1.6mm) for every full turn of Hex Nut.

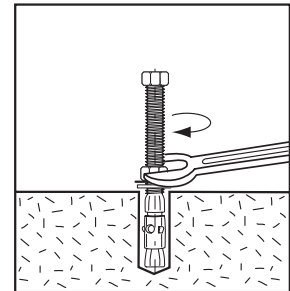

- F. Spin down top Hex Nut. Add Flat Washer.

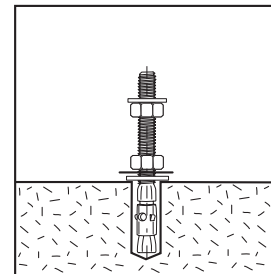

NOTE: Do NOT add 3rd Hex Nut, Lock Washer, and 3rd Flat Washer until stiles need to be attached to Floor Anchor.

