



INSTRUCTIONS FOR INSTALLATION


Bobrick Cubicle Collection B-541 Spare Toilet Roll Holder

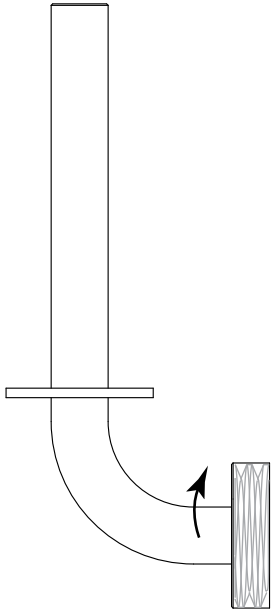

1. Unscrew escutcheon

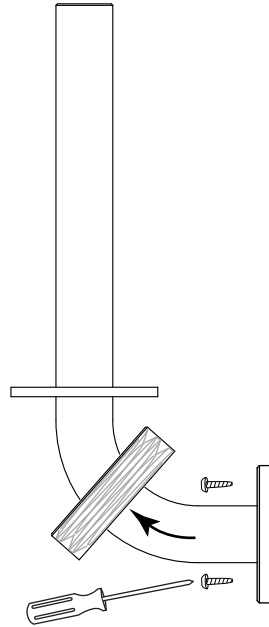

2. Insert mounting screws

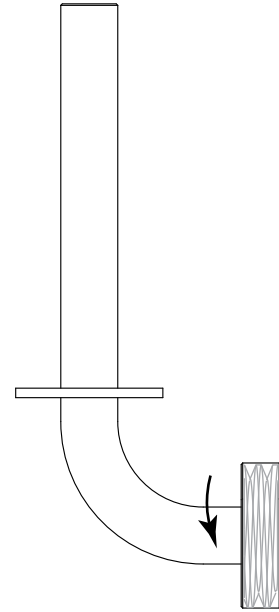

3. Replace escutcheon

