



INSTRUCTIONS FOR INSTALLATION


Bobrick Cubicle Collection B-544 Toilet Brush Holder

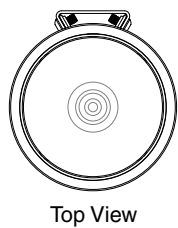


Top View

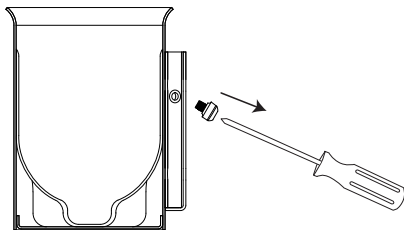


1. Remove set screws

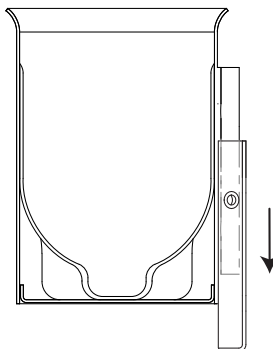


2. Slide female bracket off

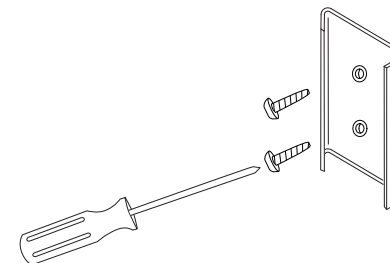


3. Mount female bracket

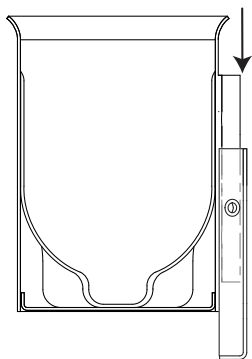


4. Slide male bracket into female

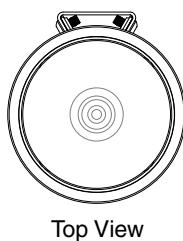

Top View

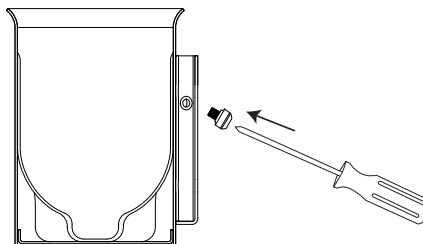

5. Replace set screws

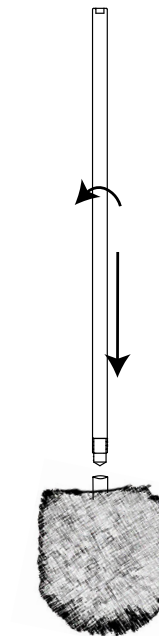

6. Screw handle into brush head

