
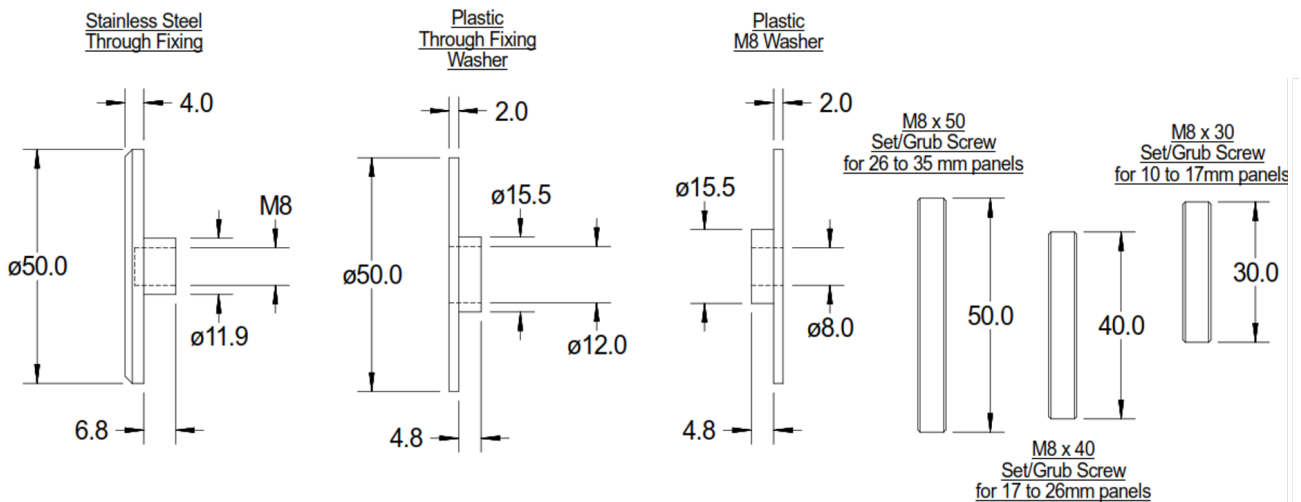


**For Installation of Grab Bar Through Toilet Partition Panel.  
One Through Fix Kit Required for One Grab Bar.**

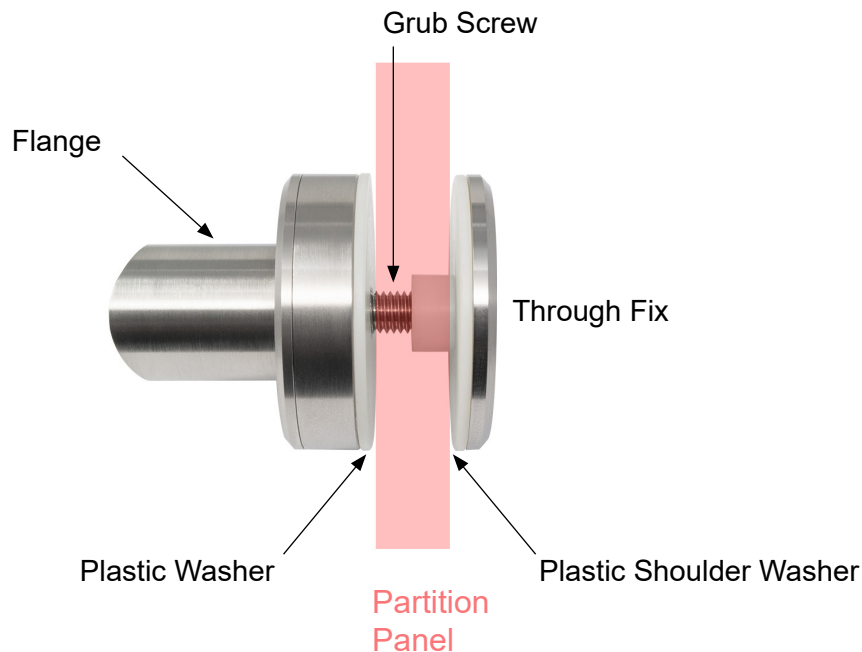

**MATERIAL :**

- 2 pcs. of machined stainless Steel "Through Fixing" satin finish (satin finish shoulder washer with metric M8 thread inside)
- 2 pairs of "Through-Fix" PU-shoulder-washers
  - needed primarily for partitions with sensitive surfaces or metal- or glass-partitions to protect the surface from any scratches and prevent potential glass-breakage
- 2 pcs. of grub screws M8x30mm for partitions of 1/2" panel thickness
- 2 pcs. of grub screws M8x40mm for partitions between 1/2" and 1" panel thickness
- 2 pcs. of grub screws M8x50mm for partitions between 1" and 1-1/2" panel thickness

continued . . .

**INSTALLATION:**

Drill a pair of holes between 16mm (41/64") and 19mm (3/4") through the panels for the grub screws going through the partition-panel. Use centre of flange base as template to mark drilling points.

**NOTE :** For Glass-Partitions, please inform the partition-manufacturer for respected hole size accordingly. Put the PU-shoulder-washers into the holes with the shoulder facing into the hole "1 pcs. from each side of the holes. Mount flange bases against Through Fixes.

**SPECIFICATION:**

Grab bar Through Fix shall have type 303, 4mm (1/8") thick satin finish stainless steel Through Fix shoulder washer, two PU shoulder washers to protect the partition panel and a grub screw prepared for 4mm (1/8") Allen wrench

**Grab Bar Through Fix shall be Anchor No. \_\_\_\_\_ (insert anchor number) of Bobrick Washroom Equipment, Inc., Clifton Park, New York; Jackson, Tennessee; Los Angeles, California; Bobrick Washroom Equipment Company, Scarborough, Ontario; Bobrick Washroom Equipment Pty. Ltd., Australia; and Bobrick Washroom Equipment Limited, United Kingdom.**