
INSTRUCTIONS FOR INSTALLATION

BOBRICK MODEL B-687 SURFACE-MOUNTED DOOR BUMPER

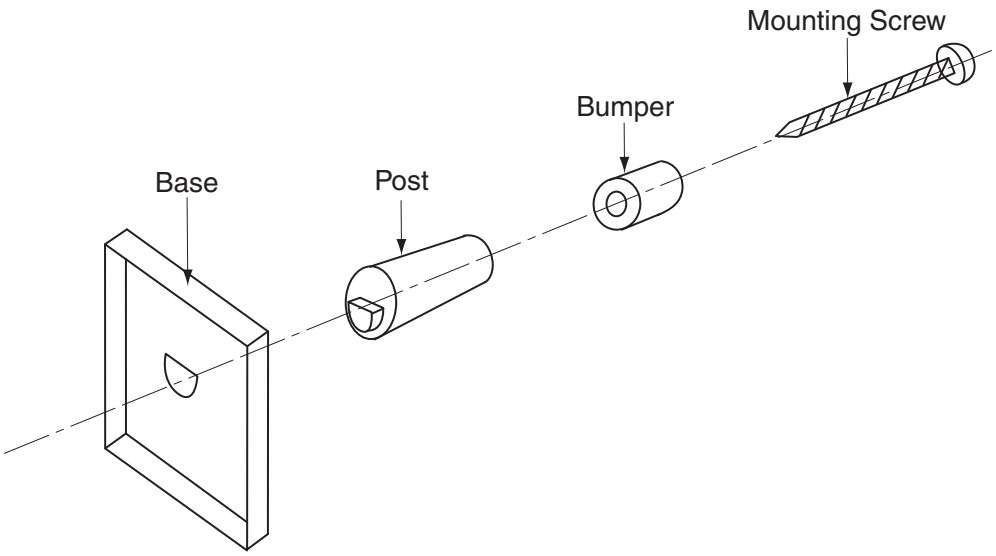

1. Position Door Bumper in desired location.
2. Use Base (687-4) as a template to locate hole for mounting screw.
3. For mounting on wood or particle board. 1" (25mm) minimum thickness, drill #26 x 1/2" (3.7 x 12.7mm).
4. Install Bumper with one #10 x 2-1/2" (64mm) sheet-metal screw furnished by manufacturer.

© 2011 by Bobrick Washroom Equipment, Inc.
Form No. 687-69 r11/29/11 Printed in U.S.A.

In the U.S.A.: BOBRICK WASHROOM EQUIPMENT, INC.
200 Commerce Drive, Clifton Park, New York 12065-1350 • Tel: 518/877-7444 • FAX: 518-877-5029
11611 Hart Street, North Hollywood, California 91605-5882 • Tel: 818/982-9600 • FAX: 818-503-1102

In Canada: BOBRICK WASHROOM EQUIPMENT COMPANY
45 Rolark Drive, Scarborough, Ontario M1R 3B1 • Ontario East: Tel: (877) 423-6555 • FAX: (877) 423-8555
• Manitoba West: Tel: (877) 423-6444 • FAX: (877) 423-8444